



THERMALJACS547*

INSTALLATION

REQUIRED TOOLS:

1.



2.



3.



4.




Filament Tape, Tie Wire, or Strapping* ** (for insulation)

Notes:

- Strapping: Ideal Products QuickStraps™ Recommended
- As approved by owner


STEP 1:

Carefully cut open package with utility knife

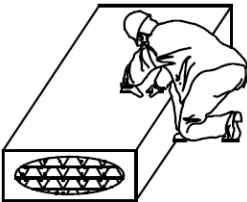


STEP 2:

Carefully but firmly roll up the first piece and hold for 3-5 seconds until PSA (pressure sensitive adhesive) has reacted and created a bond to form the insulation shell

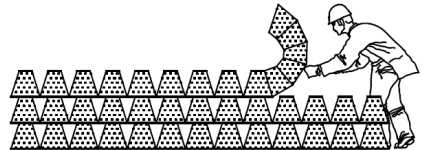


STEP 3:

Wrap around pipe

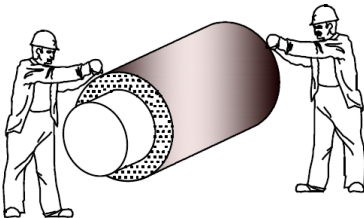

STEP 4:

Fasten with QuickStraps™ or owner approved strapping

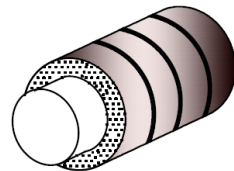

IDEAL PRODUCTS