

# THERMALJACS547®

## INSTALLATION



THERMALJACS547®

### REQUIRED TOOLS:



GLOVES



SAFETY GLASSES



UTILITY KNIFE




FILAMENT TAPE /  
TIRE WIRE /  
STRAPPING  
(for insulation)

#### Notes:


- Recommended Strapping: Ideal Products QuickStraps™
- As approved by owner

**1**

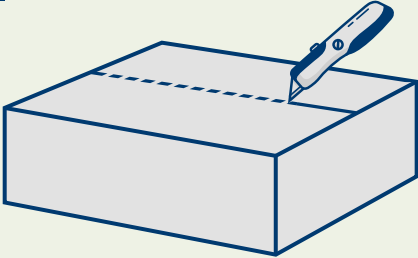


Carefully cut open package with utility knife

**2**

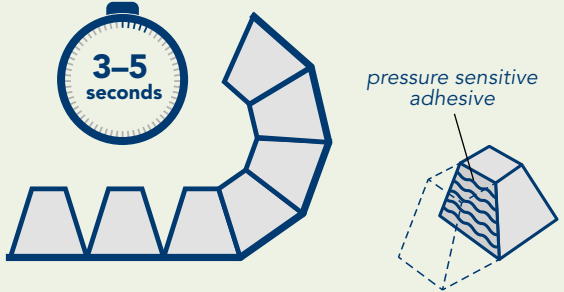


Carefully but firmly roll up the first piece and hold for 3-5 seconds until PSA (pressure sensitive adhesive) has reacted and created a bond to form the insulation shell

**3**

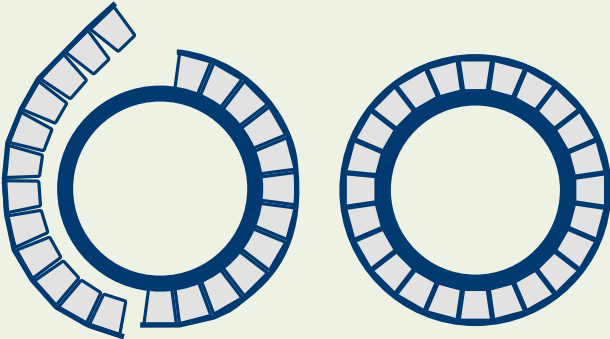

Wrap around pipe

**4**

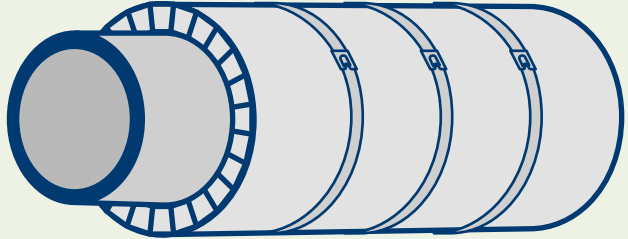

Fasten with QuickStraps™ or owner approved strapping

INSTALLATION QUESTIONS? WE ARE HERE TO HELP! EMAIL US AT [INFO@IDEALPRODUCTS.CA](mailto:INFO@IDEALPRODUCTS.CA).